

Cyclops TWRC 2200 Remote

Your Cyclops (TWRC 2200) universal (4 in 1) remote control works with your MediaDek converter box and eliminates the frustration of having to use several remote controls. The Cyclops has been designed to control most TV sets, VCRs, and CD players in today's consumer market.

The Cyclops allows you to control multiple devices. The only time you will need to change modes is when you want to switch control to another device.

For example, say you were using the remote to control your MediaDek terminal and now you want to play a tape on your VCR. First press VCR then press the appropriate key(s). To return to controlling your MediaDek terminal, press the **CBL** key and then the desired function key. The remote control will stay in the CABLE mode until you press another key.

Battery Replacement

If the batteries in your remote control need to be replaced, use two fresh 1.5 volt (AA) batteries. These batteries are available in many retail stores.

Once you have programmed your remote control, you will not need to reprogram it after you take the batteries out to replace them as long as the batteries are replaced within 24 hours of discovering weak batteries.

VCR, MediaDek not Responding

If the device you want to control does not respond, first try all of the manufacturer codes for the device. If this does not work for you, the Cyclops has a feature which will search the library of codes for you.

Often manufacturers will put their brand name on products made by others. The code search process allows you to find the correct codes.

Code Search

Suppose you can't seem to find the correct code for your TV. To start the search, turn on your TV and aim the remote control directly at it.

Press **TV**, then press and hold **SETUP** until the indicator light blinks twice, then press **9 9 1**. Now repeatedly press **POWERTV** a number of times. Be patient, and go slow so you don't miss the correct code.

When the TV turns off press and hold **SETUP** until the indicator blinks twice. The TV set code is now programmed into the remote control.

To find your settop, VCR, or AUX code, use the same procedure but substitute the CBL, VCR or AUX key for the TV key.

If these procedures are successful, you will be able to control the devices you programmed.

Program Volume Control

You can program the Cyclops to control volume through your cable TV settop terminal, your TV, or your VCR. You can change your volume control selection at any time without disturbing the codes programmed.

To program for volume control, first press and hold **SETUP** until the indicator blinks twice. Next press **9 9 3**. Finally, press **CBL**, **TV**, or **VCR** (for control through the settop, TV, VCR).

Note that the remote control automatically controls the volume of the device you have assigned to the AUX.

[Back to Top](#)